


Preparation for test

- 1 Remove cover at front right under instrument panel (68-150).

Connecting tester


- 3 Connect vacuum line (4) to black vacuum line (37), while removing blind seal.

- | | |
|-------------------------------|-------------------------------|
| 1 10-point plug connection | 6 Mode switch |
| 2 Volt or ohmmeter needle | 7 Vacuum measuring instrument |
| 3 Connection (vehicle ground) | 8 Voltmeter |
| 4 Vacuum line | |
| 5 Voltmeter switch | |

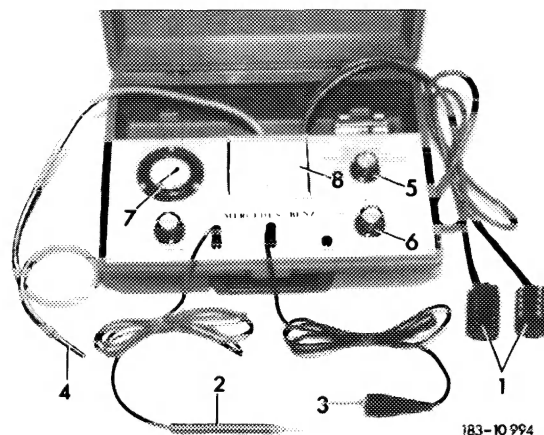

183-10 994

- 4 Connect the two 10-point plugs (1) of tester with plug connection (5).
- 5 Connect connection (3) of tester to vehicle ground (seat rail).

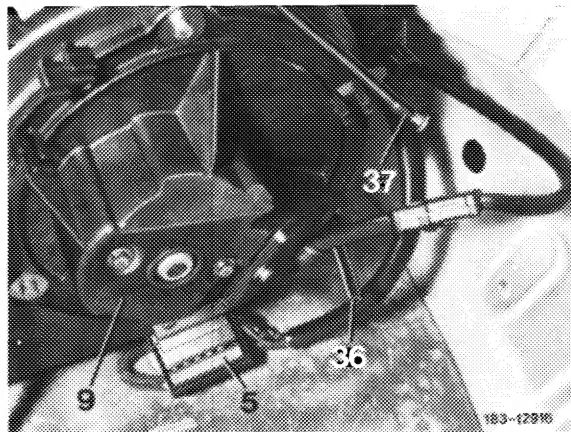

183-12816

Layout of 10-point plug connection for tester

- | |
|---------------------------------------|
| 5 10-point plug connection for tester |
| 9 Blower |
| 36 Vent line for legroom flaps |
| 37 Vacuum connection for tester |